

## Installing the Amontec USB Tiny Driver before using Jworker


Here is a picture of the Amontec USB Tiny JTAG Interface Device for which we will install the driver.




### Instructions

1. **Download** a copy of the Amontec Driver; [amontec-jtagkey-driver-d2xx-20091124.zip](https://www.amontec.com/~/media/Files/Drivers/Amontec-JTAGKey-Driver-d2xx-20091124.zip)


The original Amontec website link file is no longer accessible. To start the download; move the mouse to the top of the web-page until the header appears – then click on the download icon.

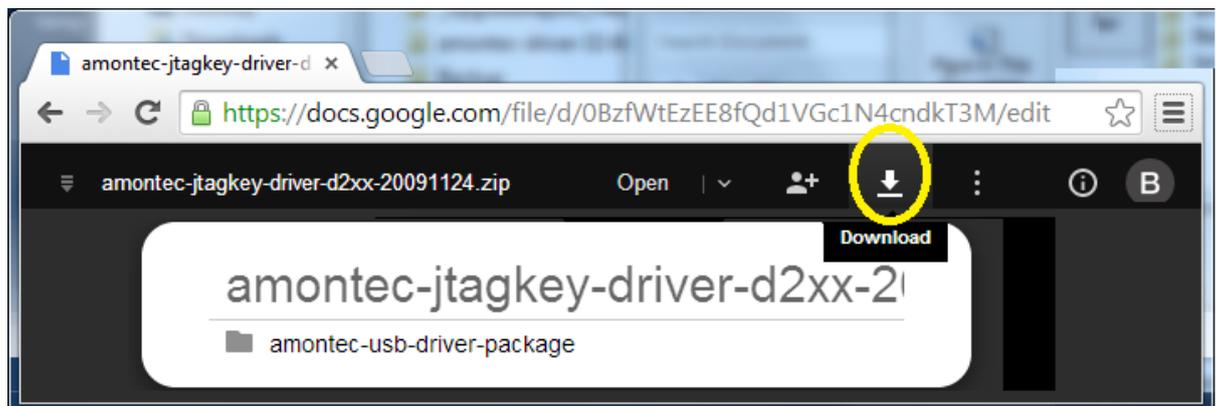


2. Extract [drag] the folder in the downloaded zip file to your desktop

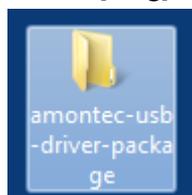


3. Open device manager: (click start, type device manager, hit enter key)

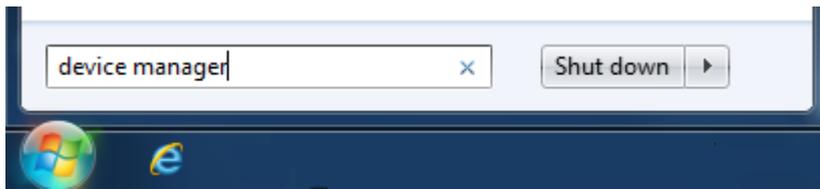


4. Connect the Amontec device to a USB port on your Windows 7 Computer. (You should see the Amontec devices [initially] under “Other Devices”.)

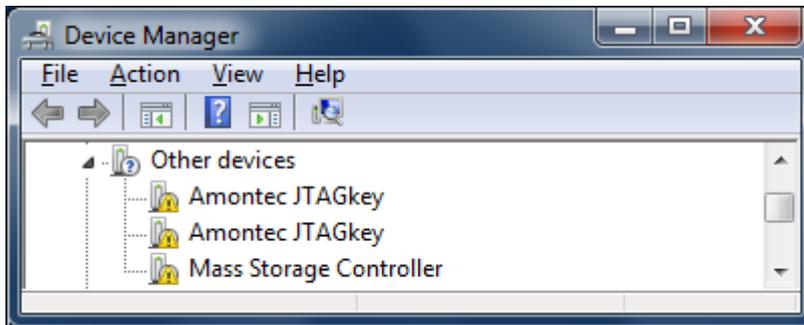


5. Right Click the first listed Amontec JTAGkey, then click “Update Driver Software”.

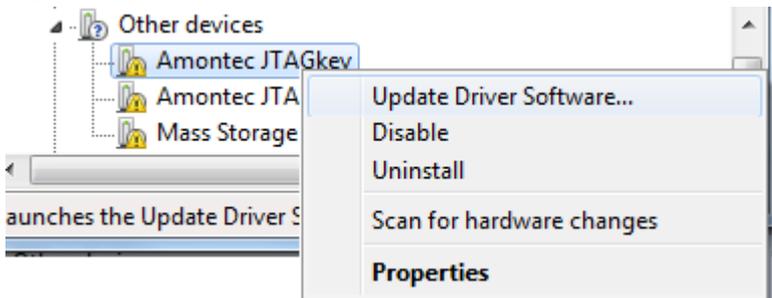


6. Select “Browse my computer for driver software”.

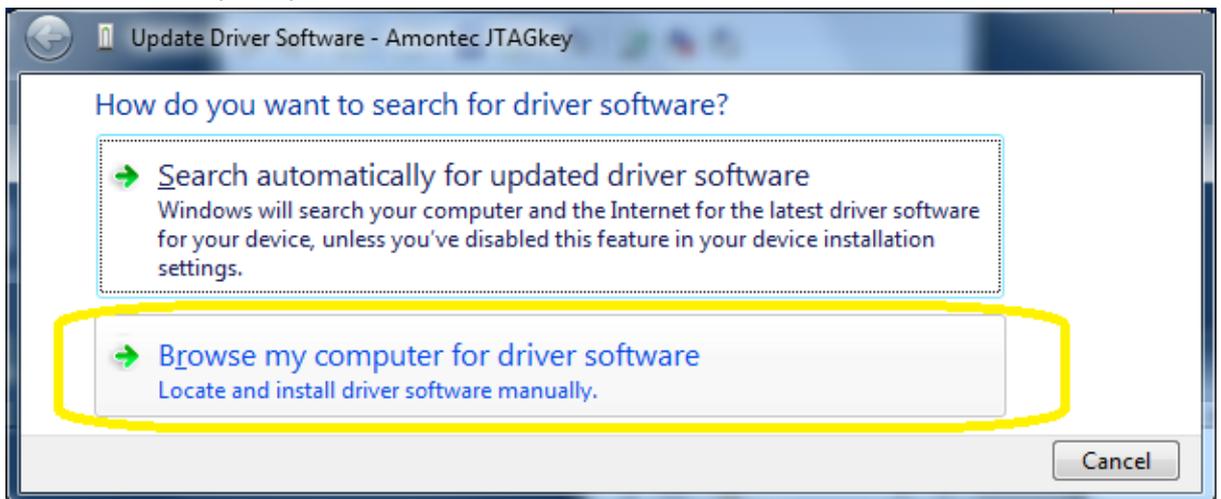


7. Click Browse.

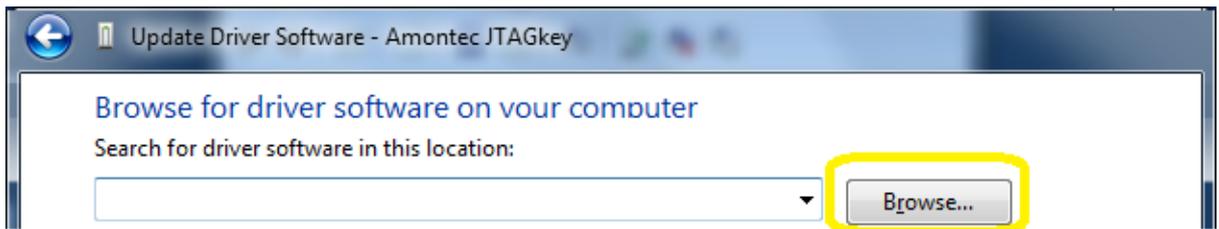


8. Select the folder that you earlier dragged onto the desktop, then click OK.

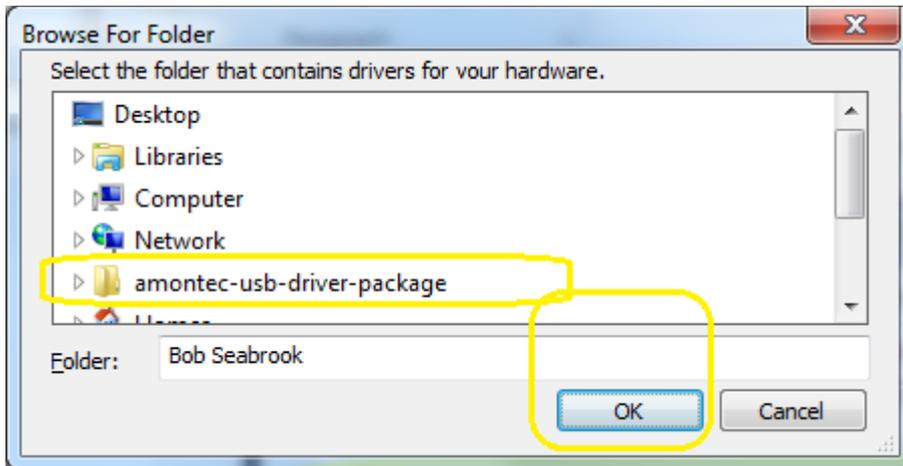


9. Click Next

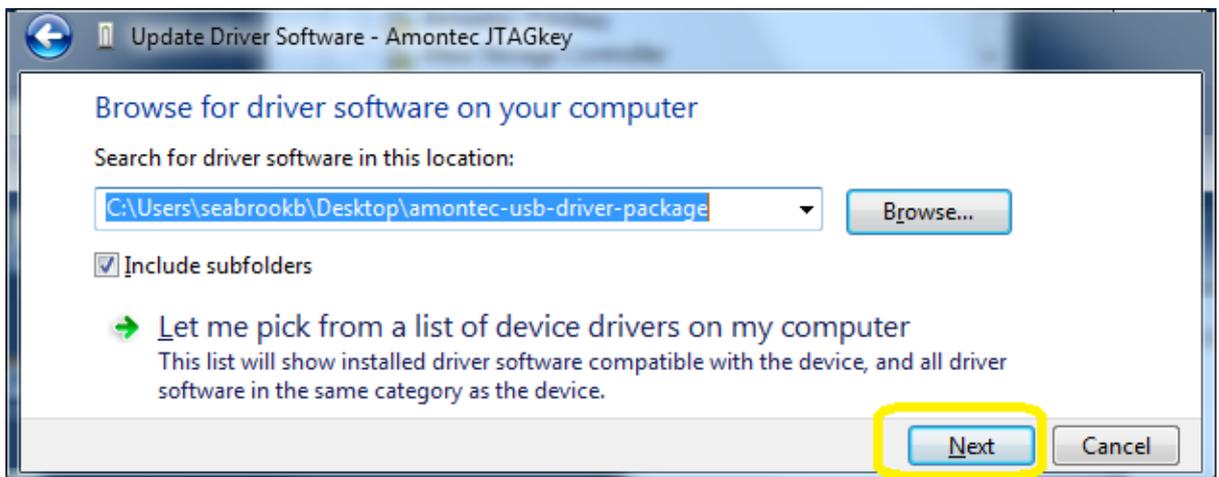


10. Wait...

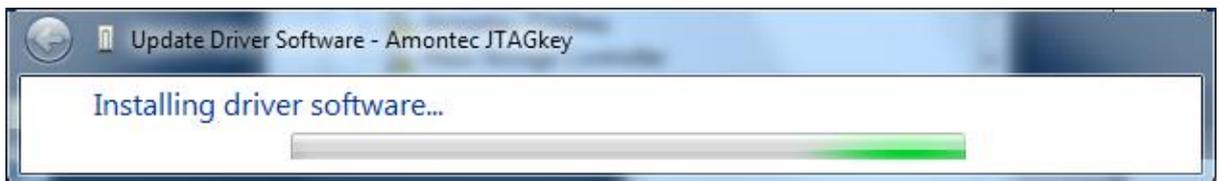

11. Click Close button

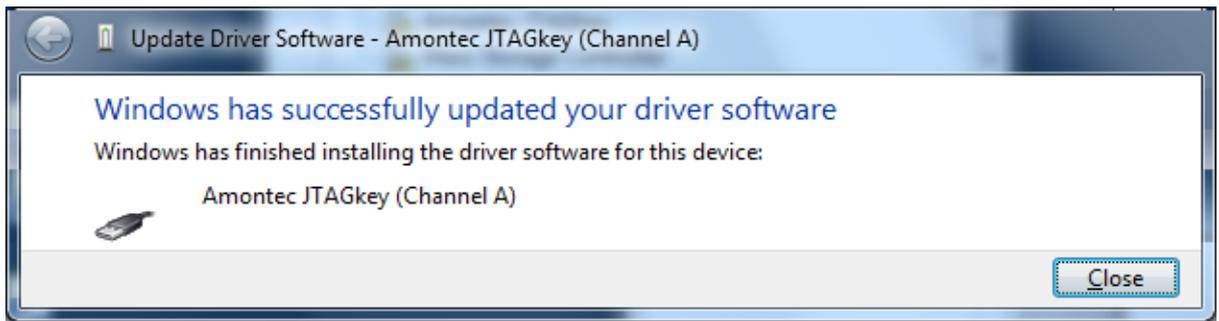

(Notice that in device manager one the “Amontec JTAGkey” entries has moved down from “Other Devices” to “Universal Serial Bus Controllers” and the devicename has been qualified to “Amontec JTAGkey (Channel A)”.)

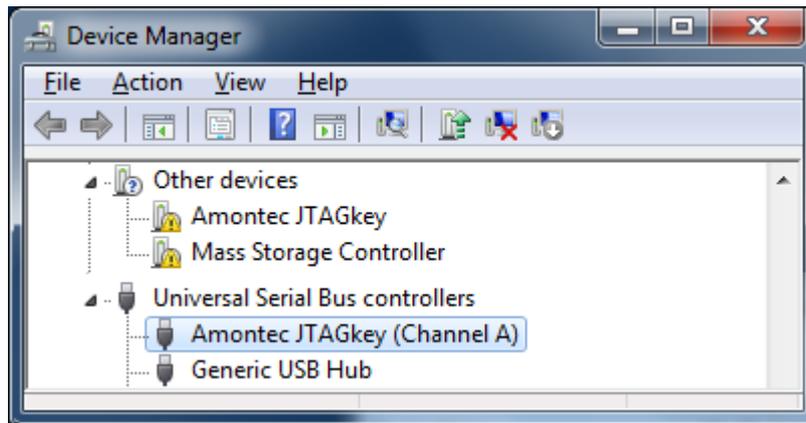

12. Repeat steps 5 to 11 for the remaining “Amontec JTAGkey” device listed under “Other Devices”.